


# FLARE COUNTDOWN™

## Setup Instructions

1. Check your flares for the **EXPIRATION DATE**
2. Your **Flare Countdown™** unit has been **pre-set** with the **CURRENT DATE** and **TIME** (EST) and a sample **EXPIRATION DATE** and **TIME** (EST).
3. You must change the unit's sample **EXPIRATION DATE** to match the date listed on your flares.

### MODE SETTINGS

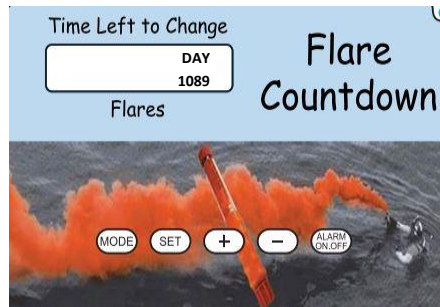

### Pressing MODE

1 time	99 1_ 1	To display calendar
2 times	12-00 AL	To display alarm time
3 times	DAY 364	To display countdown by day
4 times	HR 8759	To display countdown by hour
5 times	SEC 31535999	To display countdown by second

### How to change the pre-set sample Expiration Date.

4. The display on your unit should have the word **DAY** and a **Number**. It should look similar to the picture above. If the word **DAY** is not displayed, press **MODE** until **DAY** appears.
5. Press **SET**. The **pre-set** expiration year should be blinking. To Change the **EXPIRATION YEAR** press the "+" or "-" until the correct **YEAR** appears. Then Press **SET**.

To Change the **EXPIRATION MONTH** press the "+" or "-" until the correct **MONTH** appears. Then Press **SET**.

To Change the **EXPIRATION DAY** press the "+" or "-" until the correct **DAY** appears. Then Press **SET**.

### Once the correct Expiration Date is set, the Time will flash.

6. To Change the **TIME** press the "+" or "-" until the correct **HOUR** appears. Then Press **SET**.

To Change the **MINUTE** press the "+" or "-" until the correct **MINUTE** appears. Then Press **SET**.

### \*\* HELPFUL HINT \*\*

**Do not try to set the seconds. You can only set Hour and Minute.**

**CONGRATULATIONS, YOU ARE DONE!!**

Your unit should now display the Days remaining before your flares expire.