

FLARE COUNTDOWN™

My display is Blank? What do I do?

The most common explanation is that your battery is bad.

Isn't the battery supposed to last more than 3 years?

Yes it should, but failures can happen.

 
In the unlikely event that your battery fails, a spare has been provided to you.

Battery housing is located in the back of the unit beneath the warning sticker. Carefully pull back the sticker and open the battery housing. Replace the battery with the spare provided. If your unit fails to come back on, contact our support group at support@purdynemarine.com.

When you remove and re-insert a battery, your unit defaults to factory settings. You must complete the Initial Setup Instructions below.

Pressing the Mode Button on your unit allows you to move through the display values.

MODE SETTINGS

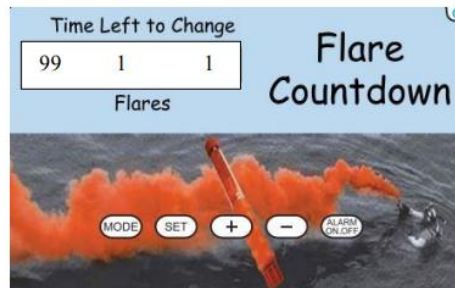

Pressing MODE

1 time	99 1 1	To display calendar
2 times	AM 12-00 AL	To display alarm time
3 times	DAY 364	To display countdown by day
4 times	HR 8759	To display countdown by hour
5 times	SEC 31535999	To display countdown by second

1. Your **Flare Countdown™** unit display will default to a factory set time. Press the MODE button until “99 1 1” appears on the calendar display. It should look like the example above.

Set the CURRENT CALENDAR DATE and TIME

2. Press **SET**. The factory **pre-set** year should be blinking. To Change to the **CURRENT YEAR** press the “+” or “-” until the correct **YEAR** appears. Then Press **SET**.

To Change to the **CURRENT MONTH** press the “+” or “-” until the correct **MONTH** appears. Then Press **SET**.

To Change to the **CURRENT DAY** press the “+” or “-” until the correct **DAY** appears. Then Press **SET**.

Once the correct **CURRENT DATE** is set, the **TIME** will flash.

3. To Change the **TIME** press the “+” or “-” until the current **HOUR** appears. Then Press **SET**.


To Change the **MINUTE** press the “+” or “-” until the current **MINUTES** appear. Then Press **SET**.

**** HELPFUL HINT ****

 Do not try to set the seconds. You can only set Hour and Minutes.

Now you have to set the EXPIRATION DATE to match the date listed on your flares.

4. Check your flares for the **EXPIRATION DATE**.
5. Press the **MODE** button until the word **Day** and a **Number** appears. It should look similar to the picture below.

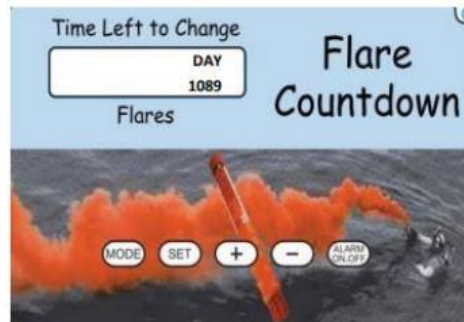

6. Press **SET**. The factory **pre-set** expiration year should be blinking. To Change the **EXPIRATION YEAR** press the "+" or "-" until the correct **YEAR** appears. Then Press **SET**.

To Change the **EXPIRATION MONTH** press the "+" or "-" until the correct **MONTH** appears. Then Press **SET**.

To Change the **EXPIRATION DAY** press the "+" or "-" until the correct **DAY** appears. Then Press **SET**.

Once the correct Expiration Date is set, the Time will flash.

7. To Change the **TIME** press the "+" or "-" until the correct **HOUR** appears. Then Press **SET**.

To Change the **MINUTE** press the "+" or "-" until the correct **MINUTE** appears. Then Press **SET**.

CONGRATULATIONS, YOU ARE DONE!!

Your unit should now display the Days remaining before your flares expire.